

Blackberry Setup

Document ID: E02B0209


Objectives:

Blackberry Remote Viewing Setup


Applicable Multicam version: v8.3 and above

Connecting to GeoVision DVR

1. Unzip [BBView.zip](#)
2. Browse BBView folder which you have just unzipped, double-click and run [Setup](#)

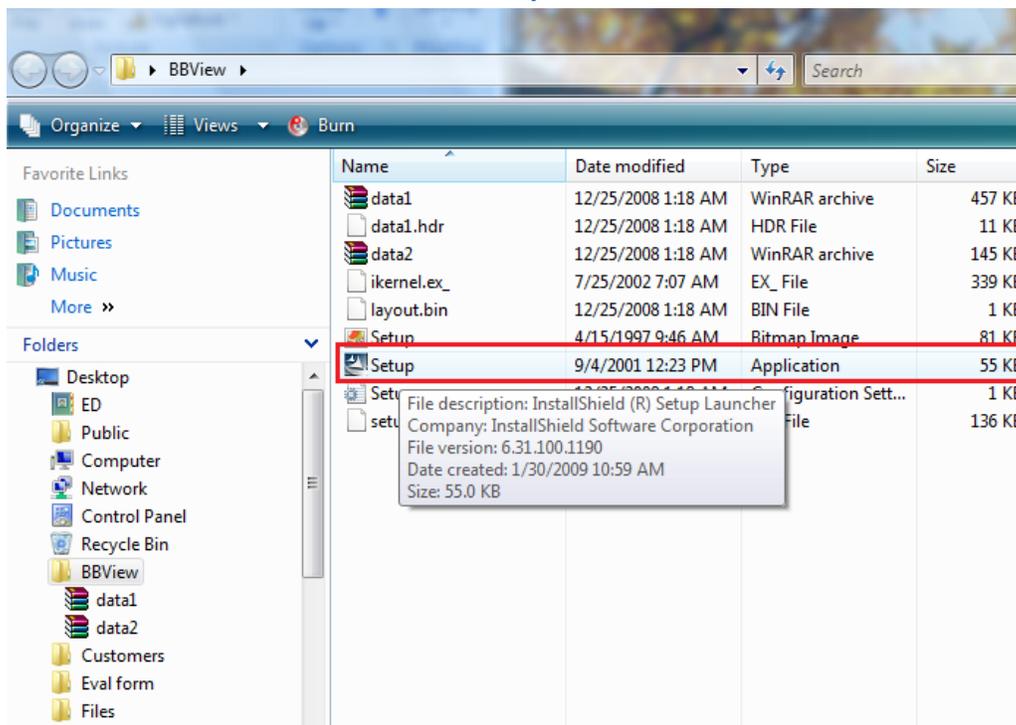

3. Proceed in each step. Select installation path and select **Next>** to continue

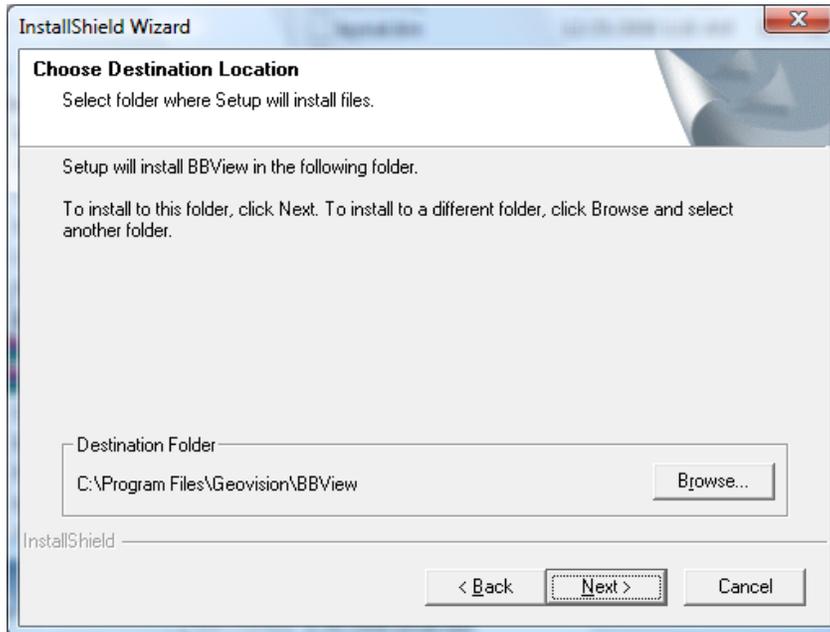

4. Proceed until installation has finished
5. Connect your BlackBerry via USB to your computer and launch **BlackBerry Desktop Manager**
6. In the menu, select **Application Loader**, which will display all the applications currently loaded on your Blackberry
7. Locate **Add** button above the applications, click on the button to bring up add application dialog box
8. Navigate to the folder as selected in Step 4. By default, the path is C:\program files\geovision\bbview. Locate the file in the folder with .alx extension
9. Choose **OK** and this application will appear in the list along with the other software installed previously

10. Once all desired applications have been introduced into the application loader, verify that each of the application has a check mark next to them.
11. Click [Next](#) which appears below the list of applications
12. BlackBerry Desktop Manager will perform synchronization and your BlackBerry may restart
 - ✓ Upon rebooting, GeoVision BBView should appear on the applications screen of your device

[Connecting to GeoVision DVR](#)

To connect your BlackBerry phone to GV-DVR, follow these steps:

13. To activate TCP/IP connection on your BlackBerry, check with your phone service provider for the correct APN (Access Point Name) and configure the [APN](#) on your phone. (e.g. go to [Options](#) and [TCP](#))
 - ✓ For example, T-mobile APN is wap.voicestream.com
No username/password is needed
14. To connect to GV-DVR, select [BBView](#) application installed on your device (normally on Blackberry desktop)
15. Select [Create Live Connection](#). In the login screen, enter the IP address, port number, username and password used by GV-DVR.
 - ✓ The default port number is 8866
16. Select [Connect](#) to initiate connection